



# RedMax 1/4 turn actuators - size M

Electrical, explosion proof rotary actuators with integrated Ex-i circuit (optional) On-off / 3-pos. control mode, 24...240 VAC/DC, 95° angle of rotation incl. 5° pretension 24 – 40 Nm with safety operation (spring return), optional with auxiliary switches ATEX tested in acc. with directive 2014/34/EU for zone 2, 22

RedMax F3
RedMax SF3
RedMax BF3
RedMax CTM
RedMax VAM

Subject to change!

# Compact. Easy installation. Universal. Cost effective. Safe.


Туре	Torque	Supply	Motor running time	Spring return*	Control mod	de Feedback	Wiring diagram
RedMax- 30 - F3	24 Nm	24240 VAC/DC	40 / 60 / 90 / 120 / 150 s/90°	~3 s/90°	On-off	-	SB 2.4 + 2.5
RedMax- 50 - F3	40 Nm	24240 VAC/DC	40 / 60 / 90 / 120 / 150 s/90°	~3s/90°	On-off	-	SB 2.4 + 2.5
RedMax- 30 - SF3	24 Nm	24240 VAC/DC	40 / 60 / 90 / 120 / 150 s/90°	~3 s/90°	On-off	2 × aux. switches	SB 2.4 / 2.5 + 3.2
RedMax- 50 - SF3	40 Nm	24240 VAC/DC	40 / 60 / 90 / 120 / 150 s/90°	~3 s/90°	On-off	2 × aux. switches	SB 2.4 / 2.5 + 3.2
RedMax- 30 - BF3	24 Nm	24240 VAC/DC	40 / 60 / 90 / 120 / 150 s/90°	~3 s/90°	On-off	2 × aux. switches + Ex-i tripping circuit	SB 2.4 / 2.5 + 7.4
RedMax- 50 - BF3	40 Nm	24240 VAC/DC	40 / 60 / 90 / 120 / 150 s/90°	~3 s/90°	On-off	2 × aux. switches + Ex-i tripping circuit	SB 2.4 / 2.5 + 7.4
RedMax CTM	Types as a	above with aluminium h	ousing and seawater resistant co	ating (cable gland	ds brass nickel	l-plated)	

RedMax- ... - VAM Types as above with stainless steel housing for aggressive ambient (cable glands brass nickel-plated)

\*At low temperatures the spring return time might vary. For further assistance please contact our sales team.

# Product views and applications



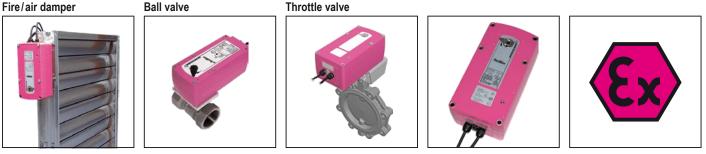

# Description

The RedMax actuators are a revolution for safety, fire and shut-off dampers, VAV systems, ball valves, throttle valves and other motorized applications for HVAC systems in chemical, pharmaceutical, industrial and offshore/onshore plants, for use in Ex-areas zone 2 (gas) and zone 22 (dust).

Highest protection class (ATEX) and IP67 protection, small dimensions, only 9,5 kg weight, universal functions and an optional stainless steel housing guarantee safe operation even under difficult environmental conditions. High quality brushless motors guarantee long life.

All actuators are programmable and adjustable on site. Special tools or equipment are not required. Motor running times are selectable or adjustable on site. The integrated universal power supply is self adaptable to input voltages in the range of 24...240 VAC/DC. The actuators are 100 % overload protected.

...Max-...-F3 actuators are equipped with spring return fail safe function. Additionally the ... Max-...-SF3 and ...-BF3 actuators are equipped with 2 integrated, potential free auxiliary switches each and ... Max-...-BF3 comes with an intrinsically safe tripping circuit for connecting the ... Pro-TT-... safety temperature trigger. Standard shaft connection is a double square direct coupling with 16 × 16 mm.

Different accessories are available to adapt auxiliary switches, terminal boxes or adaptions for ball valves and throttle valves and other armatures.

# Highlights

- For all types of gases, mists, vapours and dusts in zones 2 and 22
- Universal supply unit from 24...240 VAC/DC
- ▶ Motor running times 40-60-90-120-150 s/90° adjustable on site
- ► On-off control with spring return function
- ► Ex-i circuit for direct connection of the ... Pro-TT-... safety temperature trigger (type ...-BF3)
- 2 integrated auxiliary switches, switching at 5° and 85° angle of rotation
- ► 30-50 Nm actuators in the same housing size
- 100 % overload protected
- Compact design and small dimension (L × W × H ~ 288 × 149 × 116 mm)
- Direct coupling to the damper shaft with double square connection 16 × 16 mm
- ▶ 95° angle of rotation inclusive 5° pretension
- ▶ Robust aluminium housing (optional with seawater resistant coating) or in stainless steel
- ► IP67 protection
- Simple manual override included + preparation for comfortable manual override
- ► Gear made of stainless steel and sinter metal
- ► Weight only ~ 9,5 kg
- Integrated safety temperature sensor
- Integrated equipment for manual adjustment (push button, lamp, switch)
- ▶ Preparation for adaptable and adjustable auxiliary switches type ...Switch
- Wide range of accessories

RedMax-M-F3\_en V06 – 10-Jan-2023

Schischek GmbH Germany, Muehlsteig 45, Gewerbegebiet Sued 5, 90579 Langenzenn, Tel. +49 9101 9081-0, Fax +49 9101 9081-77, E-Mail info@schischek.com



Technical data	RedMax- 30 - F3	RedMax- 50 - F3	RedMax SF3	RedMax BF3
Torque motor (min.)	30 Nm	50 Nm	30 resp. 50 Nm	30 resp. 50 Nm
Torque spring (F)	~ 24 Nm	~ 40 Nm	~ 24 resp. ~ 40 Nm	~ 24 resp. ~ 40 Nm
Torque blockade	In blockade and end positions	torques are higher than above spe	cified torques for motor and spring	
Dimensioning of external load	min. 8 Nm	min. 15 Nm	min. 8 resp. 15 Nm	min. 8 resp. 15 Nm
Supply voltage / frequency	24240 VAC/DC ± 10 %, self	adaptable, frequency 5060 Hz ±	20 %	
Power consumption	max. starting currents see ①E	xtra information (in acc. with voltage, I	<sub>start</sub> >> I <sub>rated</sub> ), approx. 5 W holding power, ap	prox. 16 W waiting time electronic
Protection class	Class I (grounded)			
Angle of rotation and indication	95° incl. ~ 5° pretension, mec	hanical value indication		
Working direction	Selectable by left/right mount	ing to the damper/valve shaft		
Motor running times	40 / 60 / 90 / 120 / 150 s/90°	selectable on site		
Motor	Brushless DC motor			
Control mode	On-off			
Spring return (F)	spring return upon voltage inte	erruption or opening of line 3, respo	nse time up to 1 sec. after voltage interrup	tion
Spring return running time (F)	~ 3 s/90° (For usage at low te	emperatures please contact our sale	es team)	
Safety operations at 3 sec. (F)	min. 1,000 acc. to construction	n of damper and ambient. Consider	minimum external load!	
Ex-i tripping circuitBF3	Intrinsically safe circuit to conr	nect the ExPro-TT safety tempera	ature trigger directly to the actuator with M <sup>2</sup>	12 quick connection
Aux. switchesSF3,BF3	2 integrated auxiliary switches	s, switching at 5° and 85° angle of r	otation, potential free. Grid fuse-protection	is recommended!
	U <sub>max</sub> /I <sub>max</sub> AC = 250 V/5 A; U	J <sub>min</sub> AC/DC = 5 V; After one-til	me operation with U > 24 V AC/DC or I > 1	00 mA: U <sub>min</sub> AC/DC = 12 V
	$U_{max}/I_{max}DC = 48 V/1 A;$	I <sub>min</sub> AC/DC = 5 mA;		I <sub>min</sub> AC/DC = 100 mA
Axle of the actuator	Double square 16 × 16 mm, d	irect coupling, 100 % overload prote	ected	
Electrical connection	Cable ~ 1 m, wire cross section	on 0.5 mm <sup>2</sup> , equipotential bonding 4	mm².	
	Connections in hazardous are	as require a terminal box!		
Diameter of cable	~Ø7.0 mm	~Ø7.0 mm	~Ø7.0+7.6 mm	~Ø9.6 mm
	2 cables in versionSF3			
Cable gland	M16 × 1.5 mm			
Manual override	Use delivered socket wrench,	max. 4 Nm		
Housing material	Aluminium die-cast housing, c	oated. Optional with seawater resis	tant coating (CTM) or stainless steel ho	using,
	№ 1.4581 / UNS-J92900 / sim	ilar AISI 316Nb (VAM)		
Dimensions (L × W × H)	~ 288 × 149 × 116 mm, for dia	igrams see ①Extra information		
Weight	~ 9.5 kg aluminium housing, s	tainless steel ~ 15 kg		
Ambients	Storage temperature -40+7	0 °C, working temperature -20+4	40 °C at T6 and −20…+50 °C at T5	
Humidity	090 % rH, non condensing			
Operation mode	80 % ED are permitted (ED =	duty cycle)		
Maintenance	Maintenance free relative to fu	unction, maintenance must comply v	with regional standards, rules and regulatic	ns
Wiring diagrams	SB 2.4 + 2.5	SB 2.4 + 2.5	SB 2.4 + 2.5 + 3.2	SB 2.4 + 2.5 + 7.4
Scope of delivery	Actuator, 4 screws M8 × 140 r	mm, 4 nuts M8, Allen key for simple	manual override	
Parameter at delivery	90 s/90°	90 s/90°	90 s/90°	90 s/90°

Approbations		Special se	olutions and accessories
ATEX Directive	2014/34/EU	CTM	Types in aluminium housing with seawater resistant coating,
ATEX Conformity	EPS 18 ATEX 1 216 X		parts nickel-plated
IECEx Conformity	IECEx EPS 18.0107X	VAM	Types in stainless steel housing, parts nickel-plated
Marking Gases	II 3 (3) G Ex db [ic Gc] IIC T6, T5 Gc	RedBox	Terminal boxes for zone 2, 22
TypesCTM	II 3 (3) G Ex db [ic Gc] IIB T6, T5 Gc	MKK-M	Mounting bracket for boxes typeBox directly on actuator
Marking Dusts	II 3 (3) D Ex tc [ic Dc] IIIC T80°C, T95°C Dc	ExPro-TT	Safety temperature trigger for fire dampers
Ex-i circuit data	see table (T 1.0)	RedSwitch	2 external aux. switches, adjustable for zone 2, 22
		AR-16-xx	Reduction part for 16 mm square connection to 14 or 12 mm shafts
CE Marking	CE 0158	Kit-S8	Cable glands nickel-plated
EMC Directive	2014/30/EU	Adaptions	for dampers and valves on request
Low Voltage Directive	2014/35/EU	RedMaxS	Ambient temperature up to +60 °C (T4), 110240 VAC/DC, 25 % ED
Enclosure Protection	IP67 in acc. with EN 60529		

RedMax-M-F3\_en V06 – 10-Jan-2023

Schischek GmbH Germany, Muehlsteig 45, Gewerbegebiet Sued 5, 90579 Langenzenn, Tel. +49 9101 9081-0, Fax +49 9101 9081-77, E-Mail info@schischek.com



RedMax-...-F3

**Special option** 

RedMax-...-SF3

... -CTM

RedMax-...-BF3



... -VAM


**Electrical connection** 


All actuators are equipped with a universal supply unit working at a voltage range from 24...240 VAC/DC. The supply unit is self adjusting to the connected voltage The safety operation of the spring return function works if the supply voltage is cut or line 3 opened. For electrical connection inside hazardous areas a terminal box is required (e.g. RedBox).

An over-current protection fuse < 10 A has to be provided by installer.

Note: The initial current is appr. 2 A for 1 second.

Integrated auxiliary switches signal the rotation angle's position. Umin and Imin change once the switches were operated with higher voltage or current.

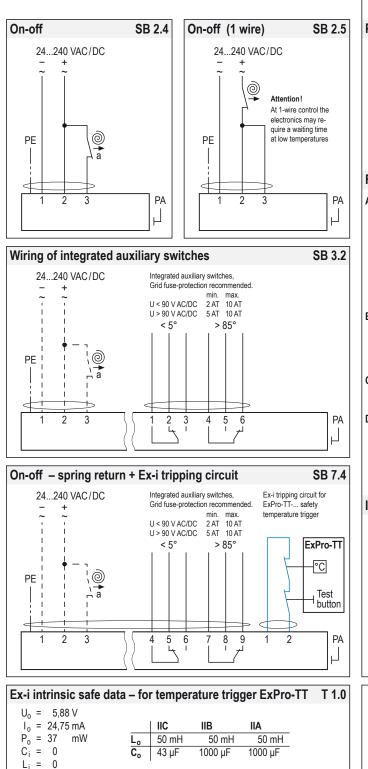

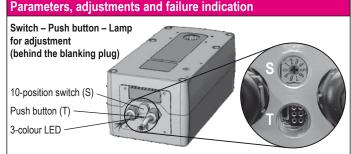

# Parameter selection

Example:		Туре			Torques (m	iotor)	
RedMax-30-BF			x-30-BF		<b>30 Nm</b> 50 Nm		
Requested parameter:					V		
Torque	30 Nm	Runnin	ig times		Position of	switch (S)	
Motor running time	90 s/90°	40	s/90°	►	00	05	
		60	s/90°		01	06	
Result:		90	s/90°		02	07	
Switch position 02		120	s/90°		03	08	
		150	s/90°		04	09	

# Functions, adjustments and parameters

# A) Self adjustment of angle of rotation

ATTENTION: To adjust the angle of rotation connect only wire 1 and 2. Do not connect wire 3.

Apply supply voltage to wire 1 and 2. Turn switch (S) to position 02. Press button (T) for a minimum of 3 seconds. The actuator drives to the first end position, detects the blocking position and performs a spring return to the starting position. The LED flashes GREEN during adjustment. After that disconnect from the mains and connect wire 3.

The adjustment takes about 93 seconds (90 sec. "On", 3 sec. "Off").

### B) Selecting motor running time

Adjust parameters only if actuator is in idle state or without applied potential. Turn switch (S) to the position required for the intended operation acc. to table above. The selected parameters will be carried out at the actuator's next operation.

# C) Function of the ExPro-TT-... in the Ex-i tripping circuit

When the ... Pro-TT's tripping circuit is opened the actuator runs into its end position with spring return.


#### D) Additional information for control in On-off operation a closed

- = actuator opens
- = spring return

The rotation direction (clockwise/counter clockwise) depends on left/right mounting of the actuator to the damper.

# Installation

a open

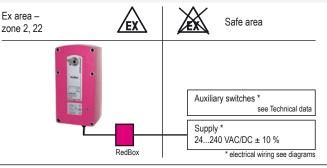


Attention

During commissioning apply a self adjustment drive. Regard duty cycle at motor running times! Never use spring return actuators without external load.

RedMax-M-F3\_en V06 – 10-Jan-2023

 Schischek GmbH Germany, Muehlsteig 45, Gewerbegebiet Sued 5, 90579 Langenzenn, Tel. +49 9101 9081-0, Fax +49 9101 9081-77, E-Mail info@schischek.com





... -CTM

... -VAM



# Important information for installation and operation

#### A. Installation, commissioning, maintenance

All national and international standards, rules and regulations for hazardous Ex-areas must be complied with. Certified apparatus must be installed in accordance with manufacturer instructions. If the equipment is used in a manner not specified by the manufacturer, the safety protection provided by the equipment may be impaired. For electrical installations design, selection and erection, EN/IEC 60079-14 can be used. For electrical connection an Ex-e terminal box is required (e.g. RedBox-...).

Attention: If the actuator is put out of operation all Ex rules and regulations must be applied. You have to cut the supply voltage before opening the terminal box!

The cables of the actuator must be installed in a fixed position and protected against mechanical and thermical damage. Connect potential earth. Avoid temperature transfer from armature to actuator! Close all openings with min. IP67. For outdoor installation a protective weather shield against sun, rain and snow should be applied to the actuator. The waiting time of the electronics at low temperatures can be minimized by a constant voltage supply to terminals 1 and 2. During commissioning apply a self adjustment drive. Actuators are maintenance free. An annual inspection is recommended. For electrical installations inspection and maintenance, EN/IEC 60079-17 can be used. Ex-actuators must not be opened by the customer.

#### B. Manual override

Manual override only if supply voltage is cut. Use delivered socket wrench with slow motions, usage can be tight.

Attention: Releasing or letting go the Allen key too fast at manual operating actuators with spring return causes risk of injury!

#### C. Shaft connection, selection of running time

Actuators are equipped with a direct coupling double square shaft connection of 16 × 16 mm. The housing of the actuator is axially symmetrically built to select Open-close direction of the spring return function by left-right mounting. Using the 10-position switch different motor running times and spring return running times can be selected on site in acc. to the actuator type.

#### D. Temperature trigger ... Pro-TT-...

The actuator ... Max-...-BF3 will work only with the temperature trigger ExPro-TT-...

#### E. Spring return

Spring return function works only if the supply voltage for terminal 1 or 2 is cut. In the event of an electrical interruption, the spring returns to its end position even if supply voltage is available again during return function. Thereafter operation will continue.

#### F. Operation at low ambient temperatures

The spring return time at low temperatures might vary. Please contact our sales team for further information.

#### G. Excess temperatures

In acc. to the ATEX rules and regulations Ex actuators must be protected against excess temperature. The internal thermostat works as a maximum limiter and, in the event of failure at incorrect temperatures, shuts off the actuator irreversible. An upstream connected temperature sensor stops the actuator before reaching its max. temperature. This safety feature is reversible, after cooling down the actuator is completely functional again. In this case the failure must be eliminated immediately on site!

## H. Synchron mode

Do not connect several actuators to one shaft or link mechanically together.

#### I. Mechanical protection

Actuators must be operated with a minimum external load.

After installing the actuator to the damper/armature a self adjustment drive has to be performed in order to protect the damper/armature against mechanical overload. During operation the actuator reduces briefly its speed (motor power) before reaching the end position for a "gentle" blockade/stop.

#### J. Intrinsically safe circuits

The supply of the push button (adjustment drive), the 10-position switch (adjustment of torque and running time), the LED indicator and the sensor connection ExPro-TT is performed intrinsically safe!

### K. Routine tests of fire dampers

For periodic inspection of fire dampers cut off the supply line (current of actuator). The test button at ExPro-TT-... is only for test aims of actuator's function.

# (i) Extra information (see additional data sheet)

Additional technical information, dimensions, installation instruction, illustration and failure indication

# Accessory RedSwitch – auxiliary switch



For an end or inclined position indication it is possible to retrofit external, adjustable, explosion proof auxiliary switches type RedSwitch.

The ...Switch is mounted directly to the actuator. The switches deliver a potential free output and can be adjusted separately. They are connected by cable.

#### Accessory RedBox – terminal box



For electrical connection of the ...Max actuator in a hazardous area an explosion proof terminal box is required. To adapt the ...Box directly to the actuator housing a mounting bracket is required.

RedBox- 3P for ...Max-...-F3 RedBox- Y/S for ...Max-...-SF3 RedBox- BF for ...Max-...-BF3

> RedMax-M-F3\_en V06 – 10-Jan-2023

Schischek GmbH Germany, Muehlsteig 45, Gewerbegebiet Sued 5, 90579 Langenzenn, Tel. +49 9101 9081-0, Fax +49 9101 9081-77, E-Mail info@schischek.com